

Welcome

Welcome to use the Verefa robot vacuum cleaner. We hope you can have a pleasant experience!

If you have any questions or suggestions, discover our contact information at the bottom of the device to contact us, and we can provide you with the support you need.

*** Specific product details may differ from those shown here.**

Table of Contents

1. Safety Instructions	Important Safety Instructions	003
	2.1 What's in the Box	005
2. Product Overview	2.2 Product Anatomy (Including Buttons and Indicators)	006
	3.1 Important Tips Before Use	008
3. Installation	3.2 Get started	009
	4.1 Main Functions	011
	4.2 Mopping function	012
4. Operating Instructions	4.3 Network Functions	013
	4.4 Other Functions	014
	5.1 Routine Maintenance	014
5. Maintenance and Troubleshooting	5.2 Troubleshooting	018
	5.3 FAQs	019
	Basic Parameters	020
6. Declaration	Energy Saving and Battery	020
	Customer Service	021

1. Safety Instructions

Before using the product, follow these basic safety precautions:

- Read everything in the manual carefully and use the product according to the instructions in the manual.
- Keep the manual for future reference.
- If you need to transfer the product to a third party, please attach the manual with the product.
- Any operation that does not conform to the manual may result in serious personal injuries or damage to the product itself.
- If the manual is missing, please contact the local dealer or our customer service to obtain the electronic version.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following :

READ ALL INSTRUCTIONS BEFORE USING (THIS APPLIANCE)

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

WARNING – To reduce the risk of fire, electric shock, or injury :

- Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust bag and/or filters in place.
- Unplug before connecting dust bag.
- If you do not use this product for a long time, please turn off the robot after it is fully charged and put it in a cool and dry place. Charge it at least once every three months to avoid over discharge of the battery.
- Do not use this device in areas where there are exposed electrical outlets on the floor.
- Do not use this device on unfinished, unsealed, waxed or rough surfaces. Otherwise, the floor and this device may be damaged.
- Do not use the mopping module on the carpet.
- For use only with S101 Charging Base.

Supplement for Robot Vacuum :

- Place the cords from other appliances out of the area to be cleaned.
- Do not operate the vacuum in a room where an infant or child is sleeping.
- Do not operate the vacuum in an area where there are lit candles or fragile objects on the floor to be cleaned.
- Do not operate the vacuum in a room that has lit candles on furniture that the vacuum may accidentally hit or bump into.
- Do not allow children to sit on the vacuum.
- Do not use the vacuum on a wet surface.

WARNING: Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

- Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130 °C may cause explosion. The temperature of 130°C can be replaced by the temperature of 265°F.
- Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained. This appliance contains batteries that are only replaceable by skilled persons.
- Do not modify or attempt to repair the appliance or the battery pack (as applicable) except as indicated in the instructions for use and care.
- Before using this appliance, pick up objects like clothing and loose paper. Lift up cords for blinds or curtains. Move power cords and sharp, pointed, or fragile objects out of the way. If this device passes over a power cord and drags it, an object could be pulled off a table or shelf.
-  For indoor use only.

Polarization instructions :

- To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

SAVE THESE INSTRUCTIONS


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


MODIFICATION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

2. Product Overview


2.1 WHAT'S IN THE BOX

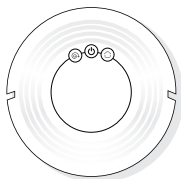


Robot Vacuum
(hereinafter referred
to as the Robot)

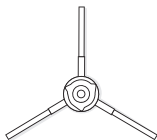


Side Brush (x1)

 


Cleaning Brush
(In the dust box)

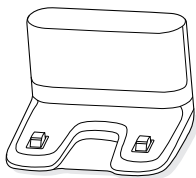


Charging Base

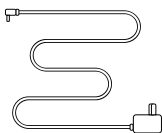


Power Adapter

 


Mopping module
(Mop pad installed)

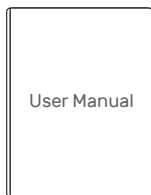


User Manual and
Other Documents

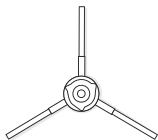

Additional Side
Brush (x1)

 

Additional Filter (x1)

 


Cable Ties (x5)

2.2 Product Anatomy (Including Buttons and Indicators)

A) Robot Vacuum

Top View

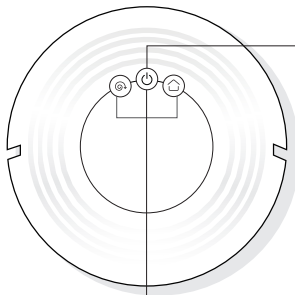


Button


- ⏻ Power button
 - **Turn On/Off** : Press and hold for 3 seconds to power on or off.
 - **Auto Cleaning** : After power-on, press to start Auto Cleaning.
- 📍 Spot Cleaning button
 - **Spot Cleaning** : Press to start Spot Cleaning.
- 🏠 Recharge button
 - **Recharge** : Press to start recharging.
- 🔄 + 🏠
 - **Reset Wi-Fi** : Press and hold both buttons for 3 seconds to reset Wi-Fi.
 - Press any button to pause during cleaning or recharging.

Robot status indicator light

- White** : Normal power
- Red** : Low power or Error
- Pulsing White** : Charging

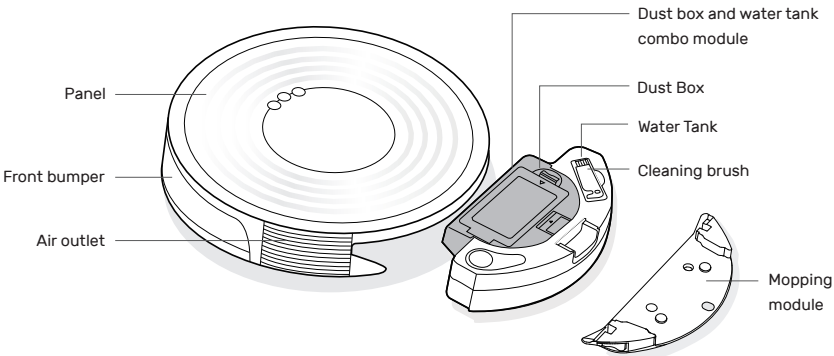

Bottom View

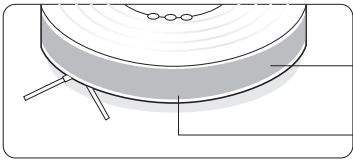


Main sensors

Front bumper sensor

Infrared obstacle avoidance sensor

Cliff sensor

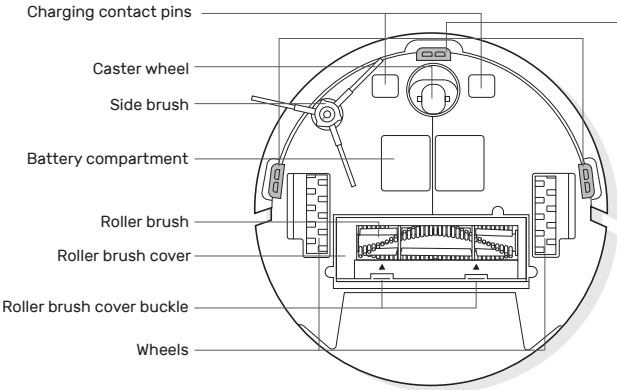

Charging contact pins

Caster wheel

Side brush

Battery compartment

Roller brush

Roller brush cover

Roller brush cover buckle


Wheels

Dust Box and Water Tank Combo Module

Filter cover buckle

Dust box cover buckle



Dust box release button

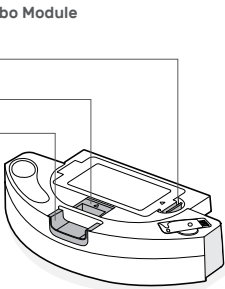


Filter cover

High-performance filter

Front filter

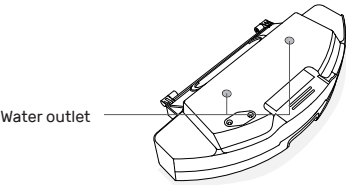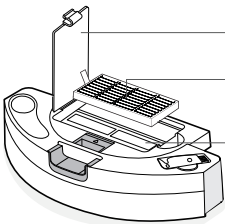

Water outlet


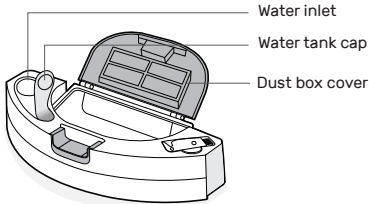


Water inlet

Water tank cap


Dust box cover

Mopping Module

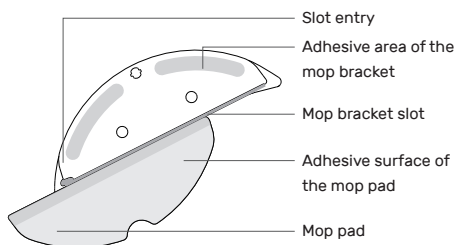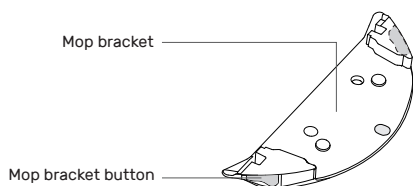


B) Charging base

Front

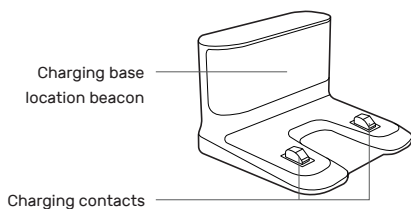


Bottom

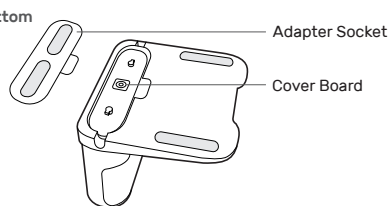


3. Installation

3.1 Important Tips Before Use


Prepare your home environment

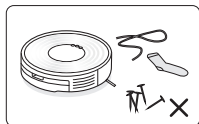


- 1 Before use, clear up the mess especially wires on the floor that may be wrapped around the robot. Remove items that are fragile, valuable, potentially hazardous and easy to fall. Avoid any damage to persons or property caused by being entangled, stuck, dragged or knocked over by the robot.

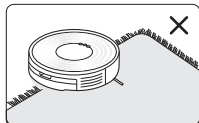


- 2 Fold tasseled edges of rugs underneath to prevent tangling the robot. Avoid cleaning rugs with very dark color or thickness exceeding 12.7 mm.

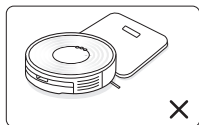

- 3 The robot may climb on top of objects less than 18mm in height. Remove these objects if possible.

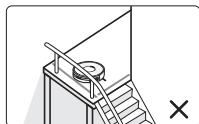

- 4 When using the robot in specific areas with suspended environment or dangerous areas, such as fireplace or exhaust port, it is recommended to place physical barriers instead of magnetic boundary strips to prevent damage to your body or property caused by accidental fall or entry of the robot.

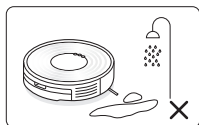


- 5 During cleaning, ensure that the robot is kept away from wet areas and viscous substances.

- 6 The robot may get stuck or encounter some obstacles during the first few times of cleaning, please follow the robot to observe and resolve any problems that may occur.


3.2 Get Started

1) Remove protective items

Before use, remove any protective strips or films on the robot.

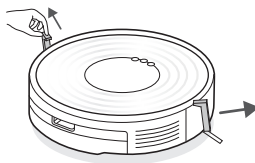

2) Install side brush

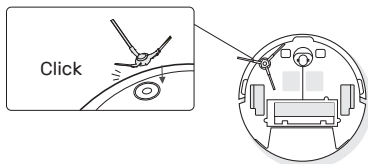


3) Place the charging base, connect the power supply and charge the robot

- ① Connect the power adapter, put the excess wire into storage (you can use cable tie, etc.).

Note :

- Power cable on your floor may entangle the robot, resulting in power failure or jamming of the robot.

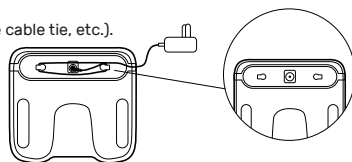


- ② Place the charging base and power it on.

- Place the charging base in an easy-to-access position for the robot.

Note :

- Ensure that no objects are placed within 1.5m in front of the charging base and 0.5m from both sides.
- Do not cover the signal transmitting area of the charging base with any object.
- Avoid direct sunlight, which will affect the recharge effect.

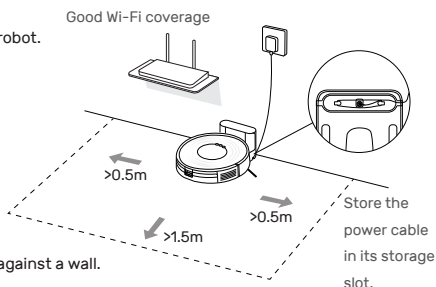

- Place the charging base on a level, non-slip, hard surface and against a wall.

Note :

- To avoid recharging failure caused by position change, do not put the charging base on a carpet or blanket.

- Always connect the charging base to the power supply. Ensure that it is located in a place with continuous Wi-Fi network and good network performance.

Note :


- Always keep the charging base plugged in, otherwise the robot will not return automatically.
- To return to the charging base smoothly after cleaning, it is recommended to start cleaning from the charging base.
- Do not move the charging base during cleaning.

- ③ Connect the robot to the charging base and turn it on.

- After connecting to the power supply, attach the robot to the charging base by aligning the charging contact pins. The robot will turn on automatically.

Note :

- When the battery level is insufficient to turn on the robot, place the robot on the charging base for a period of time, and the device will turn on automatically.
- If the robot is not on the charging base, press and hold the power button for 3 seconds to turn it on.

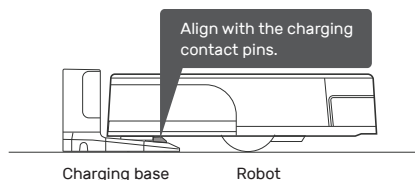

4 Fully charged.

- Fully charge the robot before first use.

Note :

- It is recommended to charge the robot for at least 4-6 hours before first use. The robot will not start or return for recharge without enough power.



4) Connect to mobile client

Note :

- Make sure your smartphone is running iOS 9.0 (or above) or Android 5.0 (or above).
- Make sure the 2.4GHz band wireless signal is enabled on your wireless router and the signal is strong.
- To ensure better connection quality, please turn on the Bluetooth of your mobile phone.

1 Download the app.

- Search for the "Verefa Life" app in the app store. Then download and install it.



2 Reset Wi-Fi.

- Press and hold both buttons ( Spot Cleaning button and  Recharge button) for 3 seconds until you hear the voice prompt. The three indicators on the robot start to flash slowly, indicating that the robot is ready for pairing.



3 Add a device.

- Open the app and follow the prompts to register or log in your account.
- Go to the home page of the app. Tap "+" in the upper right corner of the page to enter the "Add Device" page.
- Follow the on-screen instructions to connect with the robot.

Note :

- Only the 2.4GHz band is supported for the Wi-Fi connection.
- As the app will be updated from time to time, the actual operation may be different from the above descriptions. Always follow the instructions in your app to complete the Wi-Fi connection.
- If the network configuration fails, reset Wi-Fi and repeat the above operations.

5) Start cleaning

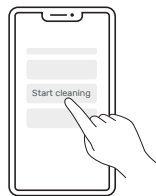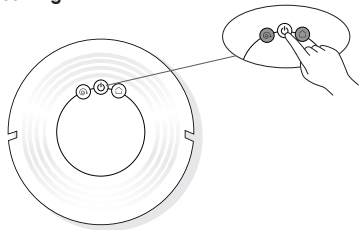

4. Operating Instructions

4.1 Main functions

● Turn on/off

- Press and hold the power button for 3 seconds to turn on the robot. The power indicator lights up. Press and hold the power button for 3 seconds again, and the robot will turn off.



Note :

- The robot cannot be turned off during charging.


● Start cleaning (Auto cleaning)

- Press the power button, and the robot will clean your rooms in sequence, following a Z-shaped cleaning method. Then it will clean along the walls in an orderly and efficient way. After cleaning, the robot will automatically return to the charging base for charging.



Note :

- If the power is too low to start cleaning, charge the robot first and then start cleaning.
- If the power is insufficient during cleaning, the robot will automatically return to the charging base for charging. After fully charged, it will resume cleaning from where it left off.
- If the cleaning area is less than 4 m², the robot will clean twice by default.
- Please tidy up all wires on your floor (including the power cable of the charging base) before cleaning to avoid power failure and damage to the items or wires caused by dragging during cleaning.

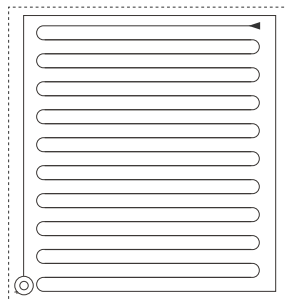

● Pause/resume/sleep

- When the robot is working, press any button to pause it, and press the power button to continue cleaning.
- If standby exceeds 10 minutes, the robot will automatically enter the sleep mode. In the sleep mode, the power indicators are all off. Press any button to wake up the robot in sleep mode.



Note :

- If the robot is placed back to the charging base for charging, the current cleaning task will be ended.
- To continue cleaning task, place the robot in its original position to avoid path confusion.
- The robot will not enter the sleep mode during charging.

● Recharge

- **Automatic mode:** When the cleaning is completed or the battery is low during auto cleaning, the robot will automatically return to the charging base to charge.
- **Manual mode:** When the cleaning is paused, press the recharge button to start recharge, or enable it in the app.



Note :

- If the robot fails to return to the charging base, manually place the robot back to the charging base for charging.
- The indicator light will pulse white when the robot is being charged.


● Spot cleaning

- In standby mode or when the cleaning is paused, press the Spot cleaning button to start Spot Cleaning. The robot will clean a specific area with a diameter of 1.2m in a spiral pattern. After cleaning, the robot will automatically return to the starting point and finish the work.



Note :

- Starting spot cleaning when there are other tasks will directly end the previous cleaning task.

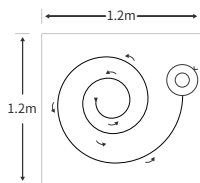

● Schedule cleaning (only set via the app)

- You can schedule cleaning in the app. The robot will automatically start cleaning at the specified time and automatically return to the charging base after cleaning.

⚠ Note :

- When the scheduled time arrives during a cleaning session, the last cleaning task will be ended.

● Suction level

- For best cleaning effect, select different suction levels according to your needs.
- The greater the suction, the shorter the cleaning time and higher the noise.
- You can set it on the mobile client.

● Auto-boost (only set via the app)

- During cleaning, the robot will automatically increase the suction power if it detects that stronger power is needed to ensure the best clean, such as thick carpets and hard-to-clean messes.
- This function will reduce the cleaning time and increase the noise level. If the increased noise disturbs you, you can disable this feature in the app.

4.2 Mopping function

● Mopping

- The user can realize the mopping function by installing the mopping module and adding water to the water tank.
- When the mopping module is installed, the Robot Vacuum automatically activate the mopping function. The user can adjust the water amount in the APP, as well as set Only Mopping Mode during the cleaning process.


1 Fill the water tank with water

- Take out the dust box and water tank combo module.
- Open the water tank cap, fill tank with water and close it tightly.

⚠ Note :


- Do not use detergent and disinfectant to avoid corroding the water tank and blocking the water outlet.
- Do not fill with hot water, as it may cause deformation of the water tank.

- Reinstall the combo Module

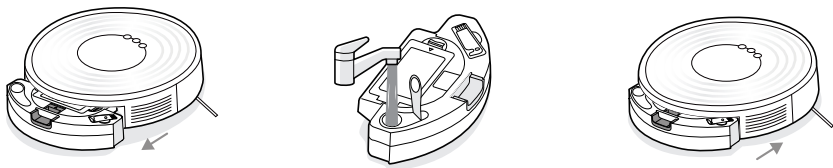


2 Install the mop pad

- Wet the mop pad and wring it out until it does not drip. Place the mop bracket on the reverse side, insert the mop pad along the mop bracket slot, and stick it firmly.

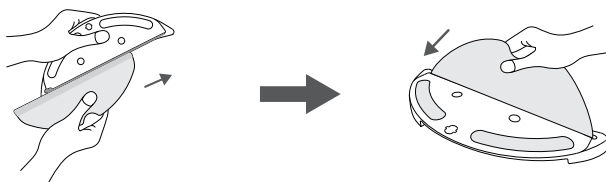

③ Install the mopping module

- Push the mopping module with the mop pad installed in parallel along the back of the Robot Vacuum, and install it in place when a "click" sound is heard.


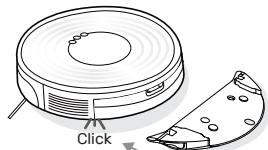


④ Start cleaning

- Start the cleaning task, and the mopping function will be performed at this time.

⑤ Remove the mopping module

- When the Robot Vacuum finishes working and returns to the charging base, press the buttons on both sides and take out the mopping module backwards.

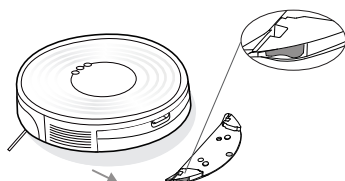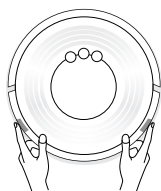

- When finishing mopping the floor, charging or not using, please remove the mopping module and clean the mop pad in time, and pour out the water in the water tank to avoid odor or mildew.



Note :

- Please use the mopping function when someone is looking after.
- Don't allow wet mopping modules staying in a certain area for a long time to avoid excessive moisture damage to the ground.
- When the mopping module is installed, the obstacle crossing height of the Robot Vacuum will be reduced. Please be aware of the possibility of sticking
- The mopping function is only applicable to the clean floor without stubborn stains or liquid. If there are coffee stains, ink stains and other colored stains on the floor, do not use the mopping function to avoid soiling the floor.
- Mopping works best on smooth, hard surfaces, but may not work well on uneven tiles, heavily waxed floors, or rough surfaces. Because it may get stuck, slip, and not be able to mop the floor smoothly.
- Do not use the mopping function on the carpet.
- For better mopping effect, it is recommended to vacuum the floor 3 times with the Robot Vacuum before using the mopping function.


● **Water amount adjustment**

- In order to ensure the best mopping effect, users can choose different water output levels for mopping according to their needs.
- The higher the water adjustment gear, the shorter the mopping life.
- Please pay attention to whether you need to replenish water to achieve the best mopping effect.

4.3 Network functions

● **Reset Wi-Fi**

- If your mobile phone cannot connect to the robot (such as configuration or password change of your router), try to reset the Wi-Fi and reconnect to the network.
- Press and hold both buttons (⌚ Spot Cleaning button and 🏠 Recharge button) for 3 seconds until you hear the voice prompt. The three indicators flash slowly, indicating that the robot is ready for pairing.
- For detailed Wi-Fi setup instructions, refer to "Installation > Connect to mobile client" in this manual.

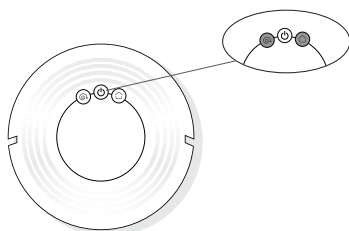

● Mobile client functions

- You can remotely control your robot through the mobile application.
- With the app, you can access more features such as schedule cleaning, find the robot, review the status and cleaning records.
- For specific Wi-Fi setup instructions, refer to "Installation > Connect to mobile client" in this manual.



Note :

- Due to continuous development and upgrading of the app, functions and details may be slightly adjusted. Please refer to the actual version.

4.4 Other functions

● Find my robot

- If your robot is stuck somewhere, you can find it through the "Find my Robot" function in the app.

● Force restart system

- When the button does not respond or cannot be turn off, please try to restart the system.
- When not being charged, press and hold the power button for 10 seconds to force turn off, and then press and hold the power button for 3 seconds to turn on.

● Restore factory settings

- If the system cannot be used normally after resetting, please try to restore the factory settings.
- When not being charged, press and hold both the power button and the recharge button for 8 seconds at the same time until you hear the prompt tone.
- The robot will clear all information and settings. At this time, the user needs to reconfigure the settings (including the network settings).

5. Maintenance and Troubleshooting

5.1 Routine maintenance

Please turn off and unplug the power cable before cleaning and maintaining the product.

For best performance, refer to the following table for routine maintenance.

Parts	Maintenance frequency	Replacement frequency
Dust box	Monthly	-
Filter	Weekly	Every 3 months
Roller brush	Monthly	Every 6-12 months
Roller brush cover	Monthly	Every 3-6 months
Side brush	Monthly	Every 3-6 months
Water tank	After each use	-
Mopping module	After each use	-
Mop pad	After each use	Every 3-6 months (or with obvious wear)
Caster Wheel	Monthly	-
Wheel	Monthly	-
Sensors	Monthly	-
Charging contact pins and charging contacts	Monthly	-



Note :

- If pets are kept, the frequency of parts maintenance should be increased to twice per cycle.
- The replacement frequency may vary depending on the actual situation. If visible or abnormal wear occurs, replace the parts.

1) Clean dust box and the filter


- 1 Press the dust box release button to take out the dust box.
- 2 Open and empty the dust box.
 - Use a cleaning brush to gently clean the inner cavity of dust box, the front filter of the dust box cover, the Auto-empty dirt port and the Auto-empty dirt port cover.
- 3 Close the dust box cover, press the filter cover buckle to open the filter cover, and take out the filter.
- 4 Thoroughly flush the dust box and filter with clean water.
- 5 Completely dry the dust box and filter and replace them.



Note :

- Be sure to dry the filter of the dust box thoroughly before use, so as to ensure normal operation and service life.
- Do not put the incomplete dust box into the robot, so as to avoid mistakenly triggering the cleaning, which will block the air duct of the robot or damage the fan.
- Do not put the dust box or filter into a dishwasher for cleaning.


1

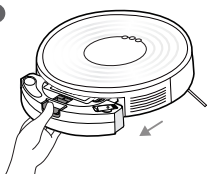


2





3

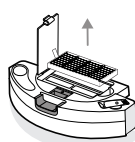

4

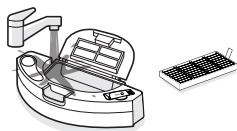


5

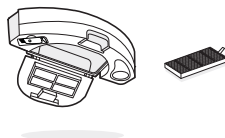 

2) Clean the water tank

- 1 Press the dust box release button to remove the dust box and water tank combo module.
- 2 Open the water tank cap and pour out the remaining water.
 - If further cleaning is required, fill with water and close the water tank cap, shake the tank, and then pour out the water.
- 3 Dry the water tank and put it back.



1

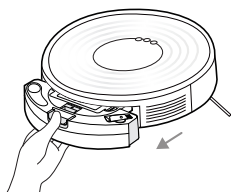

2




  3




3) Clean the mopping module

- 1 Press the mopping module buttons to take out the mopping module.
- 2 Remove the mop pad from the mop bracket.
- 3 Wash the mop pad and hang it to dry.

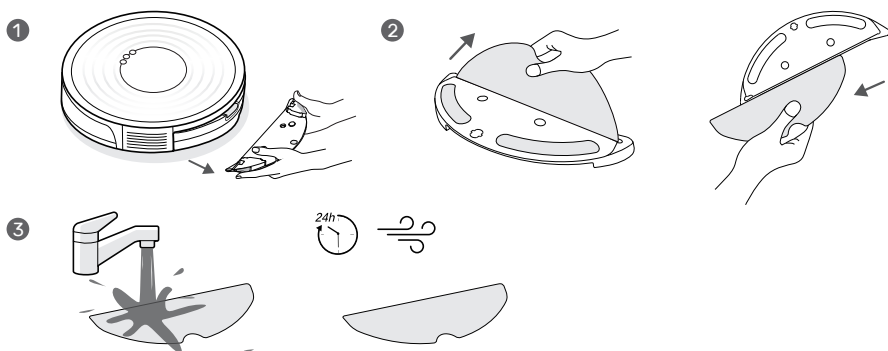


4) Clean roller brush and roller brush cover

- 1 Press and hold the roller brush cover buckles on both sides inward, and take out the roller brush cover and roller brush.
- 2 Cut off the hair wound on the roller brush with the blade of the cleaning brush.
- 3 The roller brush bearing on the side of the roller brush can be removed to clear any hair wound in the gap.
- 4 Clean the dirt on the roller brush cover.
- 5 Install the roller brush and the roller brush cover back.

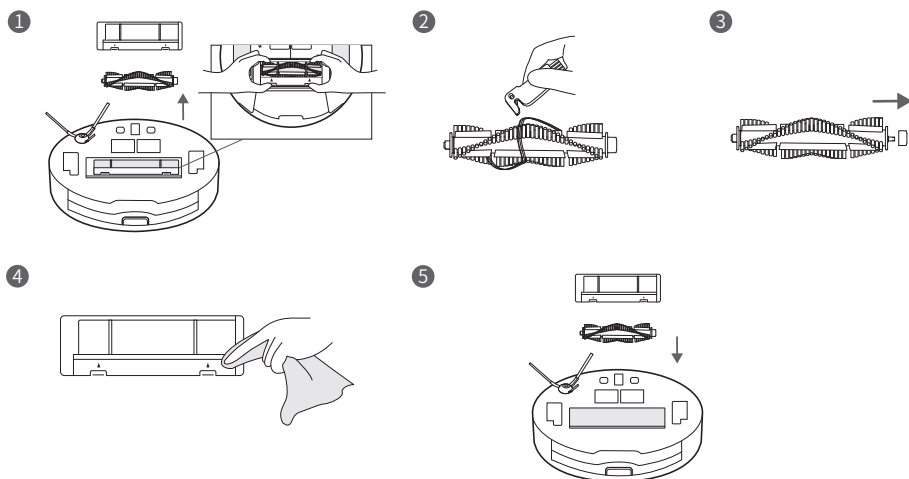


5) Clean side brush

 - 1 Pull out the side brush.
- 2 Clean the side brush with a cleaning brush and install it back.




6) Clean casters wheel

- 1 Pry out the caster axle and pull out the caster body with a small screwdriver and other tools.
- 2 Clear the caster axle of any hair and dirt, then reinstall and compress them.

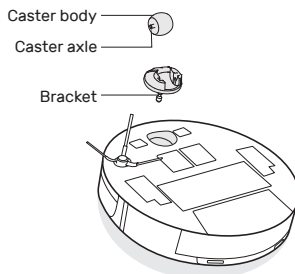

7) Clean wheels

- 1 Wipe and clean the wheels with a dry soft cloth.

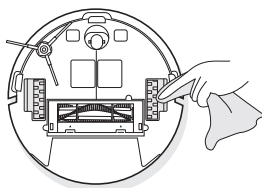


8) Clean sensors, charging contact pins and charging contacts

- 1 Wipe and clean the sensors with a soft dry cloth.



Note :

- There are sensitive electronic components inside the product. Please wipe them with a soft dry cloth when cleaning. Do not use wet rags to prevent damage caused by water.

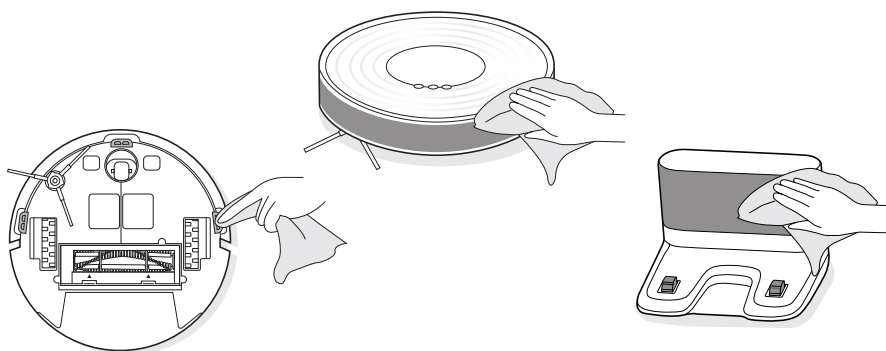

5.2 Troubleshooting

When abnormality occurs during the operation of the product, the robot indicator will be on in different red states and give prompt sound accordingly. Please solve it according to the following methods.

Indicator light	Voice prompt	Solution
Robot - Slowly Flashing Red	Error 1: Front bumper stuck. Please clean and retry.	- The front bumper is stuck. Please tap repeatedly to remove any dirt. After confirmation, please relocate it to start.
	Error 2: Side brush stuck. Please clean and retry.	- The side brush may be entangled with trapped dirt. Please clean and retry.
	Error 3: Roller brush stuck. Please clean and retry.	- The roller brush may be entangled with trapped dirt. Please clean the roller brush and retry.
	Error 4: Wheel stuck. Please clean and retry.	- The wheel may be entangled with trapped dirt. Please clean the wheel and retry.
	Error 6: Filter blocked or wet. Please clean, dry and retry.	- The filter may be blocked or wet. Please clean it. If it is not dry, please dry it for at least 24 hours. If it cannot be solved, please replace the filter.
	Error 7: Wheel suspended. Please move it to near its original position and retry.	- The robot may be picked up or suspended, please move it to a new position close to the original position and retry. - The robot is suspended in the air or the cliff sensor may be stuck with dirt or blocked. Please wipe the cliff sensor with a dry cloth and then move it to a nearby place to start.
Robot - Solid Red	Error 11: Low Battery. The system is about to shut down. Please charge it.	- The battery power is low (less than 5%) and it is not on the charging base. Please charge the robot at the charging base.
	Error 12: Robot trapped. Please clear obstacles around.	- The robot may be stuck or trapped. Please clear obstacles around the robot.
	Error 13: Charging base blocked. Please clear it.	- The area around the charging base may be blocked by obstacles or dust. Please clean the area around and wipe the charging base location beacon area.
	Error 14: Charging error. Please wipe the charging contacts.	- Please wipe the charging contact pins of the robot and the charging contacts of the charging base with a dry cloth.
Robot - Alternately Flashing Red and White	Error F1: Side brush module fault. Please check and try restarting the system.	- Please check whether side brush is entangled with dirt. Please remove, clean and reinstall the side brush, and then try to turn off and then turn on the system. - If the fault persists, please contact our customer service.
	Error F2: Roller brush module fault. Please check and try restarting the system.	- Please check whether the roller brush is entangled with dirt. Please remove, clean and reinstall the roller brush then try to turn off and then turn on the system. - If the fault persists, please contact our customer service.
	Error F3: Vacuum fan module fault. Please check and try restarting the system.	- Please check whether the dust box, filter or dust suction port is blocked by dirt. Please clear them, and then try to turn off and then turn on the system. - If the fault persists, please contact our customer service.
	Error F4: Wheel module fault. Please check and try to restart the system.	- Please check whether the wheel is entangled with dirt. Please clean it, and then try to turn off and then turn on the system. - If the fault persists, please contact our customer service.
	Error F6: Battery module fault. Please wait until the battery temperature is normal before using.	- The battery temperature is too high or too low. Please wait for the battery temperature to be normal before use. - If the fault persists, please contact our customer service.

5.3 FAQs

Problem type	Solution
Unable to turn on.	1) Low battery power. Please make sure that the charging base is connected to the power supply, then place the robot on the charging base and align it with the charging contacts, and the device will start automatically. 2) If it still cannot be started, please try to force restart system. When robot is not charging, press and hold the power button for 10 seconds to force turn off, and then press and hold the power button for 3 seconds to power on.
Unable to charge.	1) Please remove the robot from charging base and check whether the indicator light of the charging base is on. If not, please make sure that the power cable and charging base's power port have been connected tightly, and the plug and the power socket have been plugged in. (If the light is not on, please contact our customer service.) 2) If the indicator light of the charging base is on, connect the turn-on robot to the charging base and ensure that the charging contact pins of the robot is aligned with the charging base charging contacts. Check whether the indicator light of the robot changes to pulsing white. 3) If the indicator light of the charging base is on and the robot is turned on, but the robot cannot be charged, please refer to "clean sensors, charging contact pins and charging base contacts" and then try the above two steps again. (If the problem persists, please contact our customer service.)
Unable to start.	1) Make sure the robot is connected to the power supply. 2) Make sure the robot is fully charged. 3) Press and hold the power button for 3 seconds to turn on the robot.
Unable to recharge.	1) Please remove any obstacles near the charging base and place the charging base in an open area. Please ensure that no objects are placed within 1.5m in front of the charging base and 0.5m from both sides. 2) Please wipe the infrared obstacle avoidance sensor, recharge sensor, charging base location beacon area, charging contact pins and charging contacts with a soft dry cloth. 3) Please put the robot near the charging base and try again.
It stops working suddenly.	1) Check whether the robot is trapped or stuck by obstacles. 2) Check whether the battery power is too low. 3) Check whether the robot has a red light or fault prompt. Please refer to the chapter "troubleshooting". 4) If the problem persists, please force restart system, press and hold the power button for 10 seconds to force turn off, and then press the power button for 3 seconds to turn on.
Abnormal behavior.	1) Please check whether there is corresponding error prompt. Please refer to the chapter "troubleshooting". 2) Please wipe the sensor with a soft cloth, please refer to the chapter "routine maintenance". 3) Please restart the robot.
The robot vacuum cleaner suddenly generates a loud noise.	1) Please adjust the suction level or turn off auto-boost to see if this setting leads to high noise. 2) Please check whether the roller brush, filter, dust box, dust suction port, wheel and caster wheel are blocked by dirt. 3) Please ensure that the filter, the roller brush and the roller brush cover are installed in place.
The cleaning performance decreases or ash falls.	1) Please clean the dust box. 2) Please clean or replace the filter. 3) Please clean the roller brush. Refer to the chapter "routine maintenance" for specific methods.
The roller brush does not rotate.	1) Please clean the roller brush and both ends of the roller brush, and check for cleaning hair and dirt. 2) Check whether the roller brush and roller cover are installed correctly.
The mopping module has no or low water output	1) Please check whether there is water in the water tank, and whether the mopping module is installed correctly according to the instruction manual. 2) Please use the APP to adjust the water amount to High level 3) Check whether the water outlet at the bottom of the water tank is blocked, and whether the air return hole beside the water inlet is blocked.
Unable to connect Wi-Fi.	1) Please ensure that the robot is in a good Wi-Fi signal coverage area. 2) Please download the latest mobile client, reset Wi-Fi and try to connect again. 3) Please check whether the Wi-Fi password is entered incorrectly or has special characters. 4) Please check whether the router is using 5G band network or 2.4G/5G Mixed band. This robot vacuum cleaner only supports 2.4G band.

Unable to connect Wi-Fi.	1) Please ensure that the robot is in a good Wi-Fi signal coverage area. 2) Please download the latest mobile client, reset Wi-Fi and try to connect again. 3) Please check whether the Wi-Fi password is entered incorrectly or has special characters. 4) Please check whether the router is using 5G band network or 2.4G/5G Mixed band. This robot vacuum cleaner only supports 2.4G band.
Scheduled cleaning is not performed.	1) Please check whether the battery power is $\geq 12\%$, and scheduled cleaning can be started only when the power is $\geq 12\%$. 2) Please check whether the scheduled cleaning cycle is set accurately. 3) Please check whether scheduled cleaning is set successfully. Try to schedule it on your mobile client again. When scheduled cleaning is set successfully, the robot vacuum cleaner will sound a prompt tone.

If the fault cannot be eliminated according to the above methods, please contact our customer service. As your problem is our great concern, we will try our best to help you solve it.

6. Declaration

Basic Parameters

Robot Vacuum and Mop	
Product name	Robot Vacuum and Mop
Model No.	S101
Rated voltage	14.4V $\approx$
Input power supply	19V $\approx$ 0.6A
Charging time	< 6 hours
Wireless connection	Wi-Fi IEEE 802.11b/g/n 2.4GHz
charging base	
Rated input	19V $\approx$ 0.6A
Rated output	19V $\approx$ 0.6A

Trademark Notice

- Apple, the Apple logo, and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc., registered in the U.S. and other countries.
- Amazon, Alexa, and all related logos are trademarks of Amazon.com, Inc. or its affiliates.
- Google, Google Play, the Google Play logo, and Android are trademarks of Google LLC.

Energy saving and battery

Holiday energy saving mode

- On the charging base, press and hold the recharge button for 10 seconds until you hear the prompt tone. At this time, the holiday energy saving mode will be activated.
- Under the holiday energy saving mode, the network functions and reservation will be turned off, and the robot will enter the low power consumption mode for energy saving.
- Only when the robot is removed from the charging base or any button is pressed can the function be ended.

Remove the battery (for disposal)

- This is applicable when discarding this product and is not a daily operation instruction.
- The chemical substances contained in the built-in lithium-ion battery of this product may pollute the environment. Please remove it before scrapping and hand it over to a professional battery recycling bin for centralized treatment.
 1. Let the robot run to a low power state that cannot be cleaned without touching the charging base.
 2. Press and hold the power button for 3 seconds to turn off the robot.
 3. Remove the screws of the battery compartment of the robot with a screwdriver and take out the cover of the battery compartment.
 4. Press the snap down to pull out the connector plug and take out the battery.
- When removing the battery, make sure that the power is exhausted as far as possible and operate safely with power cut off.
- Please remove the whole battery pack together. Do not damage the shell of the battery pack to avoid short circuit or leakage of dangerous substances.
- If the battery has exudate and is accidentally touched, please wash it with plenty of water and get medical attention in time.



Customer Service

Customer service

If you have any questions and dissatisfaction in using the product, you can get more technical support by contacting us in the following ways. As your problem is our great concern, we will try our best to help you solve it.

Sincere care, always for you

→ Customer service, warranty, tutorial video, FAQs

→ Our latest events and news, more details

 www.verefalife.com

 support@verefalife.com

Warranty

This product is restricted to local selling, and the customer service and warranty regulations are applicable only to local customers. We provide warranty in accordance with the local warranty regulations. Any difference between the following warranty contents and local laws or regulations is subject to the construction or interpretation in local laws or regulations.

Type	Warranty	Warranty period
Robot	Robot (excluding its battery, accessories and consumables)	1 year
Parts	Charging base, power cable, mop bracket	1 year
Battery	Robot battery	1 year
Note : Filter, roller brush, roller brush cover, side brush, dust bag and mop pad are consumables. We provide no warranty for the accompanying consumables.		

None of the following circumstances is covered by the warranty. However, paid repair is available for such circumstances:

1. The user fails to operate the product in accordance with the instructions and causes damage due to improper storage;
2. The free warranty for the robot and its parts have expired;
3. It is damaged during disassembly by maintenance workers not authorized by us;
4. Unable to provide a valid purchase voucher number;
5. The model specified in the warranty card is inconsistent with the S/N of the product to be repaired or the model is altered;
6. Damage caused by irresistible factors such as natural disasters;
7. Product failure or damage caused by accidental factors or human factors (including operation error, liquid inlet, improper plugging, scratching, handling, collision, input of inappropriate voltage, etc.).

Product Warranty Card

User name	
Mailing address	
Email address	
Phone number	
Model No.	S101
Product S/N	
Product purchase date	
Product purchase channel	☐ Amazon☐ eBay☐ Official website ☐ Taobao☐ Jingdong☐ Others, _____

Repair record

	Repair date	Repair location	Repair worker	Fault description	Replaced accessories
1					
2					
3					
4					
5					